

 
 
 
 

 

 

 
 

 



 

 
 
 

 



 
 
 

 


 




Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Rec PVR		Rec
	List PVR		Smart
	Mute		Mute
	EPG		Guide
	Info		Info
	TTX		Text
	Audio		Dual
	DTV/VCR		Media
	Subtitle		Subt
	Menu		Menu
	CH+		Ch +
	Up		Up
	Exit		Exit
	Left		Left
	Vol-		Vol -
	OK		Ok

Originalfernbedienung Ersatzfernbedienung

	Right		Right
	Vol+		Vol +
	Favourite		Pre Ch
	CH-		Ch -
	Down		Down
	Tv/Radio		TV/R
	1		1
	2		2
	3		3
	Recall		Back
	4		4
	5		5
	6		6
	Goto		Options
	7		7
	8		8
	9		9





Originalfernbedienung Ersatzfernbedienung



 


 
 
 


	0		0
	<<		<<
	>>		>>
	<<		<<
	>>		>>
	Play		Play
	Pause		Pause
	Stop		Stop
	Repeat	+	Shift + Text
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue

Originalfernbedienung Ersatzfernbedienung

 
 
 

 


 
 



 



 

 







 






 





**Originalfernbedienung Ersatzfernbedienung**

	Standby		Power
	Rec PVR		Rec
	List PVR		Smart
	Mute		Mute
	EPG		Guide
	Audio		Dual
	Info		Info
	DTV/VCR		Media
	TTX		Text
	Subtitle		Subt
	Menu		Menu
	Exit		Exit
	Favourite		Pre Ch
	Tv/Radio		TV/R
	CH+		Ch +
	CH-		Ch -
	Up		Up






 

 

**Originalfernbedienung Ersatzfernbedienung**

	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Recall		Back





**Originalfernbedienung   Ersatzfernbedienung**

	Goto		AV
	<<		<<
	>>		>>
	I<<		I<<
	>>I		>>I
	Play		Play
	Pause		Pause
	Stop		Stop
	Repeat		Shift + Text
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue

**Originalfernbedienung   Ersatzfernbedienung**