








 









 

















 


 
 






 

 


 















Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	FAV		Pre Ch
	TXT		Text
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue

 
 

 


 
 


 



 
 
 
 


 

 



 
 
Originalfernbedienung Ersatzfernbedienung

	Guide		Guide
	Exit		Exit
	Menu		Menu
	Back		Back
	?		Dual
	Tools		Options
	Source		AV
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Mute		Mute
	Vol+		Vol +
	Vol-		Vol -
	P+		Ch +
	P-		Ch -





**Originalfernbedienung    Ersatzfernbedienung**

	3D		3D
	[...]..		Subt
	..00		TV/R
	[ - ]->		Format
	@		Smart
	My Media		Media
	Rec		Rec
	Play		Play
	Pause		Pause
	Stop		Stop
	>>		>>
	<<		<<
	>		>>
	I<		I<<

**Originalfernbedienung    Ersatzfernbedienung**