 

 



 











 





 

 



 






 



 
 
 


 

 




 
 

 

 
 
 
 




 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	DTV/ATV		Smart
	Return		Back
	P.Mode		Shift + Format
	S.Mode		Shift + Dual
	Sleep		Sleep

Originalfernbedienung Ersatzfernbedienung

	Menu		Menu
	Exit		Exit
	Source		AV
	Display		Info
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Lang/Audio		Dual
	Reclist		List
	Rec		Rec
	FAV/List		Pre Ch
	Freeze		Media
	Vol+		Vol +
	Vol-		Vol -
	CH+		Ch +



