











































 



 





 

 



 











Originalfernbedienung Ersatzfernbedienung

|   |        |   |                       |
|---|--------|---|-----------------------|
|    | Power  |    | Power                 |
|    | Mute   |    | Mute / Dimmer         |
|    | P.Mode |    | Picture / Format      |
|    | S.Mode |    | Sound / Title         |
|    | Sleep  |    | Sleep / Timer         |
|    | Audio  |    | Audio / Lang I/II     |
|    | 1      |    | 1                     |
|    | 2      |    | 2                     |
|    | 3      |    | 3                     |
|    | 4      |    | 4                     |
|   | 5      |   | 5                     |
|  | 6      |  | 6                     |
|  | 7      |  | 7                     |
|  | 8      |  | 8                     |
|  | 9      |  | 9                     |
|  | Freeze |  | Pause / Step / Freeze |
|  | 0      |  | 0                     |

Originalfernbedienung Ersatzfernbedienung

|   |            |   |                             |
|---|------------|---|-----------------------------|
|    | Recall     |    | Back / Return               |
|    | Red        |    | Red / Netflix / Search      |
|    | Green      |    | Green / APP / Repeat        |
|    | Yellow     |    | Yellow / YouTube / Repeat   |
|    | Blue       |    | Blue / Prime Video / Random |
|    | Menu       |    | Menu / Home                 |
|    | Up         |    | Up                          |
|    | Source     |    | AV / Input / RDS            |
|    | Left       |    | Left                        |
|    | OK / Enter |    | OK                          |
|   | Right      |   | Right                       |
|  | Exit       |  | Exit / Cancel / Clear       |
|  | Down       |  | Down                        |
|  | Info       |  | Info / Angle                |
|  | CH+        |  | CH+ / Page+                 |
|  | Home       |  | Shift + Menu /              |
|  | Vol+       |  | Vol+                        |



