



 

 
 



 



 



 





 
 



 




 






Originalfernbedienung Ersatzfernbedienung


 



	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Tv/R		TV/R
	Last		Back
	Menu		Menu
	Exit		Exit
	CH+		Ch +

Originalfernbedienung Ersatzfernbedienung

	CH-		Ch -
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	PG+		>>I
	PG-		I<<
	Audio		Dual
	Mode		Media
	EPG		Guide
	Favor		Pre Ch
	Red		Red
	Green		Green
	Yellow		Yellow





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Blue		Blue
	Info		Info
	Sleep		Sleep
	Sub-T		Subt
	Text		Text

