

 

 







 

 

 

 

 



 

 

 

 

 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close		Eject / Surround
	1		1
	2		2
	3		3
	Subtitle		Subtitle / EQ
	4		4
	5		5
	6		6
	Language		Audio / Lang I/II
	7		7
	8		8
	9		9
	OSD		Display / Media
	0/10		0
	10+		Guide / EPG / -/-
	Clear		Exit / Cancel / Clear

Originalfernbedienung Ersatzfernbedienung

	Prog		TV/Radio /
	Setup		Setup / OPT /
	Up		Up
	DVD/USB		AV / Input / RDS
	DVD/USB		Shift + 2
	DVD/USB		Shift + 8
	Left		Left
	Enter		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Mute		Mute / Dimmer
	<</Rev		<< / Tune-
	Stop		Stop / Hold
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	I<</Prev		I<< / Preset-



