


Originalfernbedienung Ersatzfernbedienung

	Mute		Mute
	Power		Power
	Subtitle		Subt
	Language		Dual
	Open / Close		Eject
	Angle		Format
	Prog		Sleep
	Title		List
	Menu		Menu
	Vol +		Vol +
	Vol -		Vol -
	Setup		Options
	Play / Pause		Play
	Play / Pause		Pause
	Up		Up
	Down		Down
	Right		Right

Originalfernbedienung Ersatzfernbedienung

	Left		Left
	Enter		Ok
	Stop		Stop
	L / R		3D
	1		1
	2		2
	Goto		Media
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	10+		Guide
	0		0
	<< Rev		<<



