

 


 
 
 









 

 

 













 





 

 



 





 


















 
Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	FAV		Pre Ch
	Subtitle		Subt
	Info		Info
	TTX		Text
	List		List
	Recall		Back
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9

Originalfernbedienung Ersatzfernbedienung

	0		0
	Menu		Menu
	Exit		Exit
	EPG		Guide
	Swap		Media
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	Pg Up		Shift + Up
	PG Dn		Shift + Down
	CH+		Ch +
	CH-		Ch -
	>>		>>





**Originalfernbedienung   Ersatzfernbedienung**

Pag. 2 / 2