 




 
 
 


 
 



 





 






 
 
 
 
 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	FAV		Pre Ch
	Subtitle		Subt
	Info		Info
	TTX		Text
	Recall		Back
	List		List
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9

Originalfernbedienung Ersatzfernbedienung

	0		0
	Menu		Menu
	Exit		Exit
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	EPG		Guide
	Vol +		Vol +
	Vol -		Vol -
	Timer		AV
	Pg Dn		Shift + Ch -
	Pg Up		Shift + Ch +
	<<		<<
	>>		>>
	I<<		I<<





Originalfernbedienung Ersatzfernbedienung

 




 
 
 


 
 



 





 






 
 
 
 
 

	>>I		>>I
	CH +		Ch +
	CH -		Ch -
	Play		Play
	Pause		Pause
	Stop		Stop
	Audio		Dual
	PAL / NTSC		3D
	Sleep		Sleep
	TV / Radio		TV/R
	Red		Red
	Aspect		Format
	Green		Green
	Yellow		Yellow
	Blue		Blue

Originalfernbedienung Ersatzfernbedienung





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	FAV		Pre Ch
	Subtitle		Subt
	Info		Info
	TTX		Text
	Recall		Back
	List		List
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9


 






 




 

 
 
 
 
 


 
 






Originalfernbedienung Ersatzfernbedienung

	0		0
	Menu		Menu
	Exit		Exit
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	EPG		Guide
	Vol +		Vol +
	Vol -		Vol -
	Timer		AV
	Pg Dn		Shift + Ch -
	Pg Up		Shift + Ch +
	<<		<<
	>>		>>
	I<<		I<<





Originalfernbedienung Ersatzfernbedienung




 
 

 
 







 

	>>I		>>I
	CH +		Ch +
	CH -		Ch -
	Play		Play
	Pause		Pause
	Stop		Stop
	Audio		Dual
	PAL / NTSC		3D
	Sleep		Sleep
	TV / Radio		TV/R
	Red		Red
	Aspect		Format
	Green		Green
	Yellow		Yellow
	Blue		Blue

Originalfernbedienung Ersatzfernbedienung


 
 
 





 





Originalfernbedienung Ersatzfernbedienung

Power		Power
Mute		Mute
FAV		Pre Ch
Subtitle		Subt
Info		Info
TTX		Text
List		List
Recall		Back
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9





 

 
 
 

 



 
Originalfernbedienung Ersatzfernbedienung

0		0
Menu		Menu
Exit		Exit
EPG		Guide
Swap		Media
Up		Up
Down		Down
Right		Right
Left		Left
OK		Ok
Vol+		Vol +
Vol-		Vol -
Pg Up		Shift + Up
PG Dn		Shift + Down
CH+		Ch +
CH-		Ch -
>>		>>





Originalfernbedienung Ersatzfernbedienung

<<		<<
>>		>>
I<<		I<<
Play		Play
Pause/Timeshift		Pause
Stop		Stop
Rec		Rec
Audio		Dual
M/P		Smart
Tv/Radio		TV/R
A-B		Options
Red/Zoom		Red
Green/Aspect		Green
Yellow/V-Formet		Yellow
Blue/Timer		Blue

Originalfernbedienung Ersatzfernbedienung

