 

 
 
 



 


 




 




 
 

 
 
 

 





 
 

 
 


 
 
 

 
 

 

 
 

 
 


 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Display		Info
	Guide		Guide
	Source		AV
	Wide		Format
	MPX		Back
	Menu		Menu
	Back/Cancel		Exit
	Mute		Mute
	FAV		Pre Ch
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Vol+		Vol +
	Vol-		Vol -

Originalfernbedienung Ersatzfernbedienung

	CH+		Ch +
	CH-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Teletext		Text
	Subtitle		Subt
	Red		Red
	Green		Green
	Yellow		Yellow



