






 

 










 

 







 

 



 
 
 
 
 
 
 
 
 
 


 





 
 
 


 


 




 

 





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Power		Power
	3D		3D
	Source		AV
	Setup/Media		Media
	Setup/Media		Options
	Mode		Smart
	Hide		Exit
	Zoom		Eject
	Ratio		Format
	Freeze		Pause
	Up/Keystone+		Up
	Down / Keystone-		Down
	Left		Left
	Menu		Menu
	Right		Right
	1/Left		1
	1/Left		Left
	1/Left		Left
	2/Play/Pause/Enter		2
	2/Play/Pause/Enter		Play
	2/Play/Pause/Enter		Ok
	3/Stop/Back		Back
	3/Stop/Back		3
	3/Stop/Back		Stop
	PgUp/Right/Left		Ch +
	PgUp/Right/Left		Right
	PgUp/Right/Left		Right
	4/VGA		Red
	4/VGA		4
	5/Component		5
	5/Component		Green
	6/Video		6
	6/Video		Yellow
	PgDn/S-Video		Blue





Originalfernbedienung Ersatzfernbedienung

 PgDn/S-Video	 Ch -
 7 /SD/USB A	 7
 7 /SD/USB A	 Shift + Red
 8 /HDMI/DVI	 8
 8 /HDMI/DVI	 Shift + Green
 9 /LAN/Wifi	 9
 9 /LAN/Wifi	 Shift + Yellow
 0 /USB B	 0
 0 /USB B	 Shift + Blue

Originalfernbedienung Ersatzfernbedienung