 



 
 


 
 
 
 

 

 
 







 





 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	TV		TV/R
	Input		AV
	MPX		Smart
	Sleep		Sleep
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Menu		Menu
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6


 

 
 
 

 
Originalfernbedienung Ersatzfernbedienung

	7		7
	8		8
	9		9
	0		0
	Recall		Back
	Display		Info
	CH+		Ch +
	CH-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Text		Text
	Hold		3D
	Size		Format





Originalfernbedienung Ersatzfernbedienung

	Sub Page		Subt
	Index		List
	Reveal		Options
	Mix		Dual

Originalfernbedienung Ersatzfernbedienung

