 

 

 

 

 

 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source		AV / Input / RDS
	AcuM		D.Menu / Top
	HDR		Display / Media
	Mode		Smart / List
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	Back		Back / Return
	Menu		Menu / Home
	Info		Info / Angle
	VGA		4
	HDMI/MHL		0
	Freeze		Pause / Step / Freeze
	Bright		CH+ / Page+

Originalfernbedienung Ersatzfernbedienung

	Gamma		CH- / Page-
	Sharp		Vol+
	Hide		Exit / Cancel / Clear
	Cont		Vol-
	Ratio		Picture / Format
	Super Res		Zoom / Size
	3D		3

