



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Blue/3D		Blue / Prime Video / Random
	Yellow/Source		Yellow / YouTube / Repeat
	Setup/Media		Setup / OPT /
	Green/Mode		Green / APP / Repeat
	Hide		TV/Radio /
	Zoom		Zoom / Size
	Ratio		Picture / Format
	Freeze		Pause / Step / Freeze
	Keystone Up		CH+ / Page+
	Up		Up
	Right		Right
	Left		Left
	Menu		Menu / Home
	Down		Down
	Keystone Down		CH- / Page-
	1/Left/Right		1

Originalfernbedienung Ersatzfernbedienung

	2/Stop/Back		2
	3/Play/Pause/Enter		3
	PgUp/Right/Left		>> / Preset+
	4/VGA		4
	5/Component		5
	6/Video		6
	PgDn/S-Video		<< / Preset-
	7/SD/USB A		7
	8/HDMI/MHL		8
	9/LAN/WiFi		9
	0/USB B		0

