




**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Blue/3D	 + 	Shift + Power
	Yellow/Source		Source
	Setup/Media		Enter
	Green/Mode		Auto
	Hide		Mode
	Zoom		Volt / Focus
	Ratio		Eco / Aspect
	Freeze		Freeze / Timer
	Left		Left
	Keystone Up	 + 	Shift + Up
	Up		Up
	Right		Right
	Menu		Menu
	Keystone Down	 + 	Shift + Down
	Down		Down
	1/<</>>	 + 	Shift + Vol + / Page +

**Originalfernbedienung    Ersatzfernbedienung**

	2/Stop/Back		- / Stop
	3/Play/Pause/Enter		+ / Play
	PgUp/>>/<<		Vol + / Page +
	4/VGA	 + 	Shift + Vol - / Page -
	5/Component		Comp / Video
	6/Video	 + 	Shift + Comp / Video
	PgDn/S-Video		Vol - / Page -
	7/SD/USB A		Help / Info
	8/HDMI/MHL		Blank / Mute
	9/LAN/WiFi		3D / Invert
	0/USB B	 + 	Shift + 3D / 3D /

