




























 



 












 

 


 


 








 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	AV/Source		AV / Input / RDS
	0		0
	Exit		Exit / Cancel / Clear
	-/--		Shift + Guide / EPG / -/--
	CH+		CH+ / Page+
	[i]/Info		Info / Angle

Originalfernbedienung Ersatzfernbedienung

	Vol+		Vol+
	CH-		CH- / Page-
	I-II		Audio / Lang I/II
	Vol-		Vol-
	Up		Up
	Left		Left
	OK/Select		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	TV/DTV		TV/Radio /
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	[≡]/Text		Text / Goto
	[≡o]		Sleep / Timer





**Originalfernbedienung Ersatzfernbedienung**

	[≡+]/[X]	TUNE- <<	<< / Tune-
	[≡x]/[··]	TUNE+ >>	>> / Tune+
	[.]/[*]	PRESET- <<<	l<<< / Preset-
	[≡◆]/[+]/Wide	FORMAT PICTURE	Picture / Format
	[≡?]	PRESET+ >>>	>>>l / Preset+
	[≡i]/Guide	GUIDE EPG	Guide / EPG / -/--
	P<P/SWAP	PC FAV MARKER	Fav / Marker / PC
	PP	RETURN BACK	Back / Return

**Originalfernbedienung Ersatzfernbedienung**