



Originalfernbedienung Ersatzfernbedienung

	POWER		Power
	MUTE		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide
	Recall		Back
	VOL+		Vol +
	VOL-		Vol -
	NICAM		Smart

Originalfernbedienung Ersatzfernbedienung

	INFO		Info
	TV/RADIO		TV/R
	CH+		Ch +
	CH-		Ch -
	LCD MENU		Menu
	DVB MENU		D. Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	INPUT		AV
	PMODE		Shift + Format
	SMODE		Dual
	SLEEP		Sleep
	LIST		List
	FAV		Pre Ch





Originalfernbedienung Ersatzfernbedienung

	PAGE-		<<
	PAGE+		>>
	TEXT		Text
	HOLD		Options
	EXIT		Exit
	EPG		Shift + Guide
	INDEX		3D
	SUBTITLE		Subt
	SIZE		Format
	REVEAL		Media
	RED		Red
	GREEN/AUDIO		Green
	YELLOW/PAUSE		Yellow
	BLUE		Blue

Originalfernbedienung Ersatzfernbedienung

