
 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide
	Input		AV
	Vol +		Vol +
	Vol -		Vol -
	Sleep		Sleep

Originalfernbedienung Ersatzfernbedienung

	PIP		3D
	Lang		Dual
	Prog+		Ch +
	Prog-		Ch -
	Up		Up
	Left		Left
	Menu		Menu
	Menu		Ok
	Right		Right
	Down		Down
	Text		Text
	Q.View		List
	Index		Info
	Hold		Stop
	Sub Page		Subt
	Reveal		Media
	Red / Sound		Red





Originalfernbedienung   Ersatzfernbedienung

Sound	Red / Sound	<b>SHIFT</b> + <b>SOUND DUAL</b>	Shift + Dual
Picture	Green / Picture	<b>B</b>	Green
Picture	Green / Picture	<b>PICTURE FORMAT</b>	Format
Auto	Yellow / Auto	<b>C</b>	Yellow
Screen	Blue / Screen	<b>D</b>	Blue

Originalfernbedienung   Ersatzfernbedienung




Mandis