

 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	+10		Guide
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Repeat		Text













 

 

 







 
 
Originalfernbedienung Ersatzfernbedienung

	A-B Repeat		Red
	Shuffle		Media
	Program		Sleep
	Clear		Exit
	Goto		Smart
	Kodak T.E.		Yellow
	Resume		Blue
	Tv Mode		TV/R
	Display		Info
	Slow		Green
	Step		Format
	P/N		Back
	Zoom		Shift + Eject
	Setup		Options
	Audio		Dual
	Sub-T		Subt
	Angle		List





Originalfernbedienung Ersatzfernbedienung

	Menu		Menu
	Title		AV
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Play		Play
	Pause		Pause
	Stop		Stop
	I<<		I<<
	>>I		>>I
	<<		<<
	>>		>>

Originalfernbedienung Ersatzfernbedienung

