







Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------|---|---------------------------|
|  | Open/Close |  | Eject / Surround |
|  | Mute |  | Mute / Dimmer |
|  | DVD |  | Shift + 2 |
|  | Tuner |  | Shift + 6 |
|  | Scart |  | Yellow / YouTube / Repeat |
|  | AUX |  | Shift + 7 |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | +10 |  | Shift + Guide / EPG / -/- |







 





 








Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------|---|-----------------------|
|  | Setup |  | Setup / OPT / |
|  | FM Mode |  | Guide / EPG / -/- |
|  | Pre/Tun |  | Fav / Marker / PC |
|  | Memo |  | Rec / Rec Mode |
|  | Auto |  | D.Menu / Top |
|  | Up |  | Up |
|  | Down |  | Down |
|  | Left |  | Left |
|  | Right |  | Right |
|  | Enter |  | OK |
|  | Pause/Step |  | Pause / Step / Freeze |
|  | Play |  | Play / Slow |
|  | Stop |  | Stop / Hold |
|  | Vol- |  | Vol- |
|  | Vol+ |  | Vol+ |
|  | CH- |  | CH- / Page- |
|  | CH+ |  | CH+ / Page+ |













Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------|---|-----------------------------|
|  | I<< |  | I<< / Preset- |
|  | >>I |  | >>I / Preset+ |
|  | << |  | << / Tune- |
|  | >> |  | >> / Tune+ |
|  | Zoom |  | Zoom / Size |
|  | Prog |  | TV/Radio / |
|  | Slow |  | Shift + Play / |
|  | A-B |  | Shift + YouTube / YouTube / |
|  | Goto |  | Text / Goto |
|  | Title |  | Sound / Title |
|  | Menu |  | Menu / Home |
|  | Display |  | Display / Media |
|  | Subtitle |  | Subtitle / EQ |
|  | N/P |  | Shift + Setup / OPT / Tools |
|  | Language |  | Audio / Lang I/II |
|  | Angle |  | Info / Angle |
|  | Resume |  | Shift + Display / Media |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------|---|-----------------------|
|  | Repeat |  | Green / APP / Repeat |
|  | R/L |  | Shift + Subtitle / EQ |
|  | Video |  | Shift + 4 |
|  | Return |  | Back / Return |

