

 
 
 



 









 


 

 



 

 

 






Originalfernbedienung Ersatzfernbedienung

	Display		Info
	EQ		Media
	Mode		Smart
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	+10		Guide
	Repeat		Text
	Band		Eject
	Function		AV

Originalfernbedienung Ersatzfernbedienung

	Pause		Pause
	Play		Play
	Play		Up
	>>		>>
	>>		>>
	>> / >>		Right
	Stop		Down
	Stop		Stop
	<<		<<
	<<		<<
	<< / <<		Left
	Vol+		Vol +
	Vol-		Vol -
	Power		Power

