 

 

 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TV/VCR		TV/R
	AD-Skip		Subt
	REC / QTR		Rec
	Eject		Eject
	Play		Play
	<< REW		<<

 

 



Originalfernbedienung Ersatzfernbedienung

	<< REW		l<<
	>> F FWD		>>
	>> F FWD		>>l
	Pause/Still		Pause
	Stop		Stop
	Up /Channel + / Tracking +		Up
	Down / Channel - / Tracking -		Down
	Left		Left
	Right		Right
	Clear		Exit
	OK / CLK / CNT		Ok
	i / Menu		Menu
	Show View		Smart
	Speed		Media
	AV		AV
	Child Lock		D. Menu
	VISS		Info





Originalfernbedienung Ersatzfernbedienung

	A-TR		List
	Zero / Back		Back
	OTPB		Sleep

Originalfernbedienung Ersatzfernbedienung

