
 

 


 


 


 



 




 




 
 
 
 


 






 



 


 


Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
Power ON/Off		Power	
Mute		Mute	
Every Pop		D. Menu	
Vol Rs-/Effect		Options	
Tape 1 Preset		Up	
Preset Pause	 + 	Shift + Pause	
Tape 1 Stop		Down	
Sleep		Sleep	
Woofer/Speed		3D	
Tape 2 Pre./eq	 + 	Shift + Up	
CD Random		List	
Funct./Direct		Smart	
Repeat		Text	
Vol Rs+/S.Mode		Eject	
CD/Theater		Dual	
Input/Source		AV	
CD Play		Play	
Display		Info	
Stop		Stop	
Tape 1 Hall/Ats		Menu	
CD Rewind		<<	
Volume+		Vol +	
Volume-		Vol -	
Mode		Media	
CD F.FWD		>>	
Pr 1		1	
CD Pause		Pause	
Pr 2		2	
Pr 3		3	
Pr 4		4	
Pr 5		5	
Pr 6		6	
Pr 7		7	
Pr 8		8	



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
Tape 1 Rec	 Exit	Disc 1 Eject	 +  Shift + 1
Pr 9	 9	Disc 2	 +  Shift + 2
C.Reset/T.Alti+	 Green	Disc 3 Eject	 +  Shift + 3
Tape 1 Rew	 Left	Tape 2	 +  Shift + Down
Tune/Vol SW-	 Ch -		
Tune/Vol SW+	 Ch +		
Store/Center-	 Format		
Tape 2 REC./Jazz	 +  Shift + Exit		
Pr 0/10	 0		
Tape 1 F.FWD	 Right		
Tape 2	 +  Shift + Left		
Tape 1 Play	 Ok		
C.Clock/T.Bassi+	 Red		
Search/Center	 TV/R		
Tape 2	 +  Shift + Ok		
Tape 2 FF/AudioR	 +  Shift + Right		
Program	 +  Shift + Sleep		

