





 







 














Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Eject		Eject / Surround
	OTPB		Smart / List
	Showview		D.Menu / Top
	Tv/VCR		TV/Radio /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Channel+		CH+ / Page+
	0		0
	Channel-		CH- / Page-

Originalfernbedienung Ersatzfernbedienung

	Clear		Exit / Cancel / Clear
	Enter		Mute / Dimmer
	Enter		Shift + OK
	<< Search		I<< / Preset-
	Search >>		>>I / Preset+
	Pause/Still		Pause / Step / Freeze
	Play		Play / Slow
	Rec/OTR		Rec / Rec Mode
	<</REW		<< / Tune-
	>>/F.FWD		>> / Tune+
	Stop		Stop / Hold
	Menu		Menu / Home
	Up		Up
	D/WLY		Red / Netflix / Search
	ADD T		Green / APP / Repeat
	Left		Left
	OK		OK





Originalfernbedienung Ersatzfernbedienung

	Right		Right
	SP/LP		Picture / Format
	Index		Info / Angle
	+		Vol+
	Down		Down
	Memo		Blue / Prime Video / Random
	Reset		Back / Return
	Display		Display / Media
	-		Vol-
	A-TR		Text / Goto
	CH NO. Set		AV / Input / RDS
	Clock Set		Setup / OPT /
	Auto Set		Zoom / Size

Originalfernbedienung Ersatzfernbedienung

