 


 


 


 

 




 
 
 
 


 
 
 

 

 

 










Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Eject		Eject
	Tv/Radio		TV/R
	Red/Goto		Red
	Green/Angle		Green
	Yellow/Repeat		Yellow
	Blue/A-B		Blue
	FAV		Pre Ch
	Text		Text
	Freeze/Hold		List
	Guide		Shift + Guide
	D.Menu		D. Menu
	Subtitle		Subt
	Zoom/Size		Format
	Aspect		3D
	Subpage		Smart
	Media		Media

 






 
















 
 
 
 
 



 

Originalfernbedienung Ersatzfernbedienung

	Play		Play
	Pause		Pause
	<<		<<
	>>		>>
	D.Setup		Options
	Rec		Rec
	Stop		Stop
	I<<		I<<
	>>I/Index		>>I
	Menu		Menu
	Lang/Audio		Dual
	Sleep		Sleep
	Title/Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left

 


 










Originalfernbedienung Ersatzfernbedienung

	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	CH+		Ch +
	CH-		Ch -
	Display		Info
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

Originalfernbedienung Ersatzfernbedienung

	-/--		Guide
	Back		Back
	Source		AV
	P.Mode		Shift + Format
	S.Mode		Shift + Dual

