





 




















 












 
 





**Originalfernbedienung    Ersatzfernbedienung**

|   |        |   |                  |
|---|--------|---|------------------|
|    | Power  |    | Power            |
|    | Input  |    | AV / Input / RDS |
|    | 1      |    | 1                |
|    | 2      |    | 2                |
|    | 3      |    | 3                |
|    | 4      |    | 4                |
|    | 5      |    | 5                |
|    | 6      |    | 6                |
|    | 7      |    | 7                |
|    | 8      |    | 8                |
|   | 9      |   | 9                |
|  | Disp   |  | Display / Media  |
|  | 0      |  | 0                |
|  | Recall |  | Back / Return    |
|  | Vol+   |  | Vol+             |
|  | Mute   |  | Mute / Dimmer    |
|  | CH+    |  | CH+ / Page+      |

**Originalfernbedienung    Ersatzfernbedienung**

|   |         |   |                            |
|---|---------|---|----------------------------|
|    | Vol-    |    | Vol-                       |
|    | Mouse   |    | Smart / List               |
|    | CH-     |    | CH- / Page-                |
|    | P.Mode  |    | Picture / Format           |
|    | Home    |    | Shift + Menu /             |
|    | S.Mode  |    | Sound / Title              |
|    | Menu    |    | Menu / Home                |
|    | Up      |    | Up                         |
|    | Exit    |    | Exit / Cancel / Clear      |
|    | Left    |    | Left                       |
|   | Enter   |   | OK                         |
|  | Right   |  | Right                      |
|  | Netflix |  | Shift + Red / Netflix /    |
|  | Down    |  | Down                       |
|  | YouTube |  | Shift + Yellow / YouTube / |
|  | Red     |  | Red / Netflix / Search     |
|  | Green   |  | Green / APP / Repeat       |



