

 
 
 
 







 





 






 
 

 

 

 




**Originalfernbedienung    Ersatzfernbedienung**


	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	FAV		Pre Ch
	Recall		Back
	Game		Media
	Auto		Smart
	Info		Info

**Originalfernbedienung    Ersatzfernbedienung**

	Menu		Menu
	EPG		Guide
	Exit		Exit
	CH+		Ch +
	CH-		Ch -
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Zoom		Eject





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Lan/Audio		Dual				
	Text		Text				
	Tv/Radio		TV/R				
	Subtitle		Subt				
	Play		Play				
	Pause		Pause				
	<<		<<				
	>>		>>				

