


Originalfernbedienung Ersatzfernbedienung

	Recall		Pre Ch
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	AV		AV
	Menu		Menu
	P.Mode		Format
	Zoom		Eject
	Exit		Exit

Originalfernbedienung Ersatzfernbedienung

	Up / P +		Up
	Up / P +		Ch +
	Down / P -		Down
	Down / P -		Ch -
	Right / V +		Right
	Right / V +		Vol +
	Left / V -		Left
	Left / V -		Vol -
	OK		Ok
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Still		Pause
	Display		Info
	Sleep		Sleep
	Mute		Mute



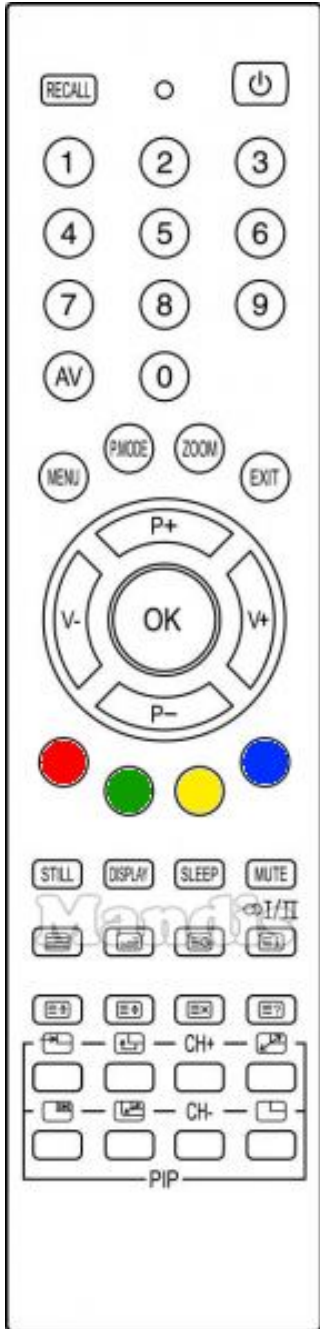

Originalfernbedienung Ersatzfernbedienung

	[≡]		Text
	[/≡]	+	Shift + Text
	[≡i] / I/II		Dual
	[≡□]		Stop
	[≡◆]	+	Shift + Eject
	[≡X]	+	Shift + Exit
	[≡?]		D. Menu
	PIP Sel		Smart
	PIP		Media
	PIP to Main	+	Shift + Ok
	PIP CH +	+	Shift + Ch +
	PIP CH -	+	Shift + Ch -
	PIP Swap		Back
	PIP Hold	+	Shift + Stop
	PIP Size	+	Shift + Smart

Originalfernbedienung Ersatzfernbedienung

