
 

 
 
 



 













 

 

 

 

 






**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Tv/AV		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Lock		Stop
	-/--		Guide
	Mute		Mute
	Sleep		Sleep
	Recall		Pre Ch

**Originalfernbedienung Ersatzfernbedienung**

	S-Mode		Dual
	P-Mode		Format
	Call		Back
	CH+		Ch +
	CH-		Ch -
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Vol+		Vol +
	Vol-		Vol -
	Menu		Menu
	TXT/Tv		Text
	Mix/Calendar		Options
	Subp/Sound		Subt
	Hold/Game		Media
	Reveal		TV/R





Originalfernbedienung Ersatzfernbedienung

INDEX	Index	DISPLAY	Info
CANCEL	Cancel	CLEAR	Exit
SIZE	Size	ECO	3D
RED	Red	A	Red
GREEN	Green	B	Green
YELLOW/TIMER	Yellow/Timer	C	Yellow
CYAN	Cyan	D	Blue

Originalfernbedienung Ersatzfernbedienung