


Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Open / Close		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Goto		Guide
	Add / Clear		Exit
	<<		<<
	>>		>>
	Pause		Pause

Originalfernbedienung Ersatzfernbedienung

	Play		Play
	Stop		Stop
	I<<		I<<
	>>I		>>I
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Setup		Options
	Navigat		Smart
	Title		List
	Menu		Menu
	Subtitle		Subt
	Angle		Format
	Source		AV
	Rec		Rec





Originalfernbedienung Ersatzfernbedienung

TIMER	Timer	SHIFT + TIMER	Shift + AV
EDIT	Edit	APP MEDIA	Media
USB	USB	A	Red
DVD	DVD	B	Green
HDD	HDD	C	Yellow
DISC OPER	Disc Oper	E-MANUAL D.MENU	D. Menu
SLOW	Slow	SHIFT + PAUSE	Shift + Pause
RETURN	Return	RETURN BACK	Back
REPEAT	Repeat	REPEAT TEXT	Text
ZOOM	Zoom	SHIFT + ZOOM	Shift + Eject
CH+	CH+	+ CH	Ch +
CH-	CH-	CH -	Ch -
P/N	P/N	SEARCH TV/R	TV/R
AUDIO	Audio	SOUND DUAL	Dual
DV	DV	+ VOL	Vol +
L/P	L/P	DISPLAY INFO	Info
MUTE	Mute	MUTE	Mute

Originalfernbedienung Ersatzfernbedienung

TV	TV	VOL -	Vol -
TV	TV	D	Blue

