









 

























Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Display		Display / Media
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Up		Up
	Up		CH+ / Page+
	Down		Down
	Down		CH- / Page-

Originalfernbedienung Ersatzfernbedienung

	Vol+ / Right		Right
	Vol+ / Right		Vol+
	Vol- / Left		Left
	Vol- / Left		Vol-
	Menu		Menu / Home
	◇		Smart / List
	AV		AV / Input / RDS
	TV		TV/Radio /
	Text		Text / Goto
	Red / F		Red / Netflix / Search
	Green / →←		Green / APP / Repeat
	Yellow / Recall		Yellow / YouTube / Repeat
	Yellow / Recall		Back / Return
	Blue / Timer		Blue / Prime Video / Random
	Blue / Timer		Sleep / Timer

