
 
 

 




 
 

 























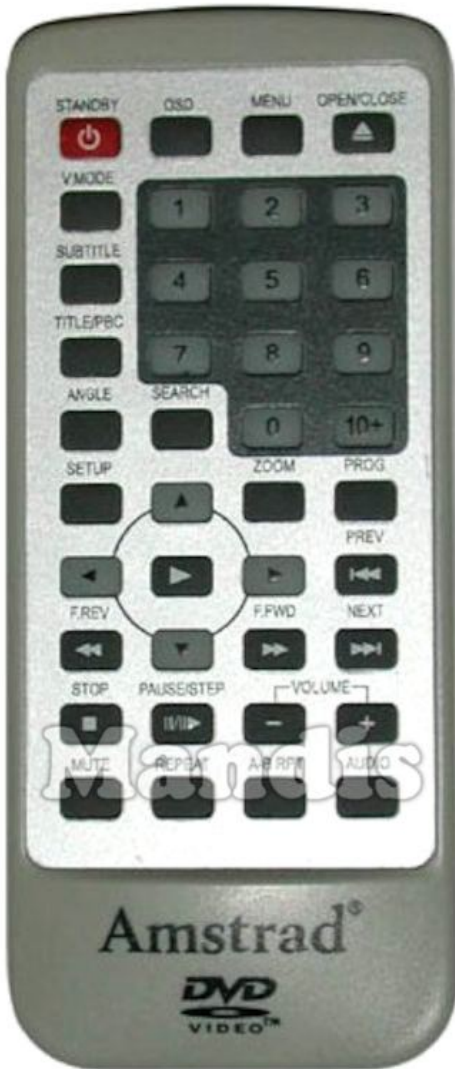 
**Originalfernbedienung    Ersatzfernbedienung**

	Standby		Power
	OSD		Display / Media
	Menu		Menu / Home
	Open / Close		Eject / Surround
	V.Mode		Picture / Format
	1		1
	2		2
	3		3
	Subtitle		Subtitle / EQ
	4		4
	5		5
	6		6
	Title / PBC		Sound / Title
	7		7
	8		8
	9		9
	Angle		Info / Angle

**Originalfernbedienung    Ersatzfernbedienung**

	Search		Red / Netflix / Search
	0		0
	10+		Guide / EPG / -/--
	Setup		Setup / OPT /
	Up		Up
	Zoom		Zoom / Size
	Prog		TV/Radio /
	Left		Left
	Play / Enter		OK
	Play / Enter		Play / Slow
	Right		Right
	Prev		I<< / Preset-
	F.Rev		<< / Tune-
	Down		Down
	F.Fwd		>> / Tune+
	Next		>>I / Preset+
	Stop		Stop / Hold





**Originalfernbedienung Ersatzfernbedienung**

	Pause / Step		Pause / Step / Freeze
	Volume-		Vol-
	Volume+		Vol+
	Mute		Mute / Dimmer
	Repeat		Green / APP / Repeat
	A-B RPT		Yellow / YouTube / Repeat
	Audio		Audio / Lang I/II

**Originalfernbedienung Ersatzfernbedienung**