




**Originalfernbedienung Ersatzfernbedienung**

|   |       |   |                  |
|---|-------|---|------------------|
|    | Power |    | Power            |
|    | 1     |    | 1                |
|    | 2     |    | 2                |
|    | 3     |    | 3                |
|    | 4     |    | 4                |
|    | 5     |    | 5                |
|    | 6     |    | 6                |
|    | 7     |    | 7                |
|    | 8     |    | 8                |
|   | 9     |   | 9                |
|  | Mute  |  | Mute / Dimmer    |
|  | 0     |  | 0                |
|  | 16:9  |  | Picture / Format |
|  | S/M/D |  | Display / Media  |
|  | PP    |  | Back / Return    |
|  | →←    |  | Smart / List     |
|  | P+    |  | CH+ / Page+      |

**Originalfernbedienung Ersatzfernbedienung**

|   |        |   |                             |
|---|--------|---|-----------------------------|
|    | P+     |    | Up                          |
|    | V-     |    | Vol-                        |
|    | V-     |    | Left                        |
|    | Menu   |    | Menu / Home                 |
|    | Menu   |    | OK                          |
|    | V+     |    | Vol+                        |
|    | V+     |    | Right                       |
|    | P-     |    | CH- / Page-                 |
|    | P-     |    | Down                        |
|   | Tv     |   | TV/Radio /                  |
|  | Exit   |  | Exit / Cancel / Clear       |
|  | Av     |  | AV / Input / RDS            |
|  | Red    |  | Red / Netflix / Search      |
|  | Green  |  | Green / APP / Repeat        |
|  | Yellow |  | Yellow / YouTube / Repeat   |
|  | Blue   |  | Blue / Prime Video / Random |
|  | ≡Text  |  | Text / Goto                 |



