



Originalfernbedienung Ersatzfernbedienung





 
 
 






 
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0/FAV		0
	AV		AV
	Mute		Mute
	List		List
	Exit		Exit
	i		Info
	Swap		Pre Ch

Originalfernbedienung Ersatzfernbedienung

	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Red/PVR		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	EPG		Guide
	TXT		Text
	Option		Options
	<<		<<
	Play		Play
	>>		>>
	Skip R		I<<
	Pause/Timeshift		Pause





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Skip F		>>I				
	Rec		Rec				
	Stop/Live		Stop				
	Timer		Shift + AV				
	Files		Subt				
	TV		TV/R				
	Radio		Dual				
	Format		Format				
	Menu		Menu				

