



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0/10		0
	+10		Shift + Guide / EPG / -/--
	TTX		Text / Goto
	Subtitle		Subtitle / EQ
	FAV		Audio / Lang I/II
			Fav / Marker / PC

Originalfernbedienung Ersatzfernbedienung

	Play		Play / Slow
	EPG		Guide / EPG / -/--
	Pause		Pause / Step / Freeze
	Zoom		Zoom / Size
	Language		Sound / Title
	Tv/VCR		Smart / List
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	<<		<< / Tune-
	>>		>> / Tune+
	Setup		Setup / OPT /
	Vol+		Vol+
	Tv/Radio		TV/Radio /
	Vol-		Vol-
	Up		Up
	CH+		CH+ / Page+
	CH-		CH- / Page-





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Down		Down
	Right		Right
	Left		Left
	Enter		OK
	Record		Rec / Rec Mode
	Preview		Back / Return
	Exit		Exit / Cancel / Clear
	Device List		Shift + Display / Media
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

