



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	V.Formal		Picture / Format
	Sleep		Sleep / Timer
	Tv/Rad		TV/Radio /
	Resolution		Setup / OPT /
	Page Up		Shift + CH+ /
	Page Down		Shift + CH- /
	Subtitle		Subtitle / EQ
	Teletext		Text / Goto
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7






 











 
Originalfernbedienung Ersatzfernbedienung

	8		8
	9		9
	0		0
	FAV		Fav / Marker / PC
	Eject/Play List		Eject / Surround
	Info		Info / Angle
	Recall		Back / Return
	Menu		Menu / Home
	Exit		Exit / Cancel / Clear
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		OK
	Vol+		Vol+
	Vol-		Vol-
	CH+		CH+ / Page+

 





Originalfernbedienung Ersatzfernbedienung

	CH-		CH- / Page-
	EPG		Guide / EPG / -/-
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	<<		<< / Tune-
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	>>		>> / Tune+
	I<		I<< / Preset-
	Stop/Time		Stop / Hold
	Rec		Rec / Rec Mode
	>I		>>I / Preset+
	V		Audio / Lang I/II
	PIP		Zoom / Size
	PIP Swap		Display / Media

Originalfernbedienung Ersatzfernbedienung

	PIP S.List		Smart / List

