

 

 

 

 

 

 



 



 

 

 

 

 









Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Red/Demo		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Option		Setup / OPT /
	[I]		Info / Angle
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Menu/Browse		Menu / Home
	[=]		Text / Goto
	Vol+		Vol+
	P+		CH+ / Page+
	Vol-		Vol-

Originalfernbedienung Ersatzfernbedienung

	Mute		Mute / Dimmer
	P-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	AV		AV / Input / RDS
	0		0
	P<P		Back / Return
	Ambilight		Smart / List
	Mode		D.Menu / Top
	<<		<< / Tune-





Originalfernbedienung Ersatzfernbedienung

	Stop/Cancel		Stop / Hold
	Play		Play / Slow
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	[i+]		Display / Media
	[1 2]		Picture / Format
	FAV		Fav / Marker / PC

Originalfernbedienung Ersatzfernbedienung

