
 





 





 
 
 
 


 
 

 
 
 

 
 
 
 
 







**Originalfernbedienung    Ersatzfernbedienung**

	DVD		AV
	VCR	 + 	Shift + AV
	Standby / On		Power
	Setup		Options
	Audio		Exit
	Subtitle		Subt
	Angle		Format
	Repeat		Text
	A-B Repeat	 + 	Shift + Text
	I<< Skip		I<<
	Clear	 + 	Shift + Exit
	Skip >>I		>>I
	Title		List
	Mode		Smart
	Return		Back
	Display		Info
	Disc Menu		D. Menu

 
 
 
 
 
 
 
 




**Originalfernbedienung    Ersatzfernbedienung**

	OK		Ok
	Up		Up
	Left		Left
	Right		Right
	Down		Down
	Stop		Stop
	Play		Play
	Pause		Pause
	<<		<<
	>>		>>
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7





Originalfernbedienung Ersatzfernbedienung





 
 



 
 

 
 



 


 


	8		8
	9		9
	0		0
	+10		Guide
	Zoom		Eject
	Search Mode		TV/R

Originalfernbedienung Ersatzfernbedienung






**Originalfernbedienung    Ersatzfernbedienung**

	Standby / On		Power
	DVD		AV
	VCR		Shift + AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Menu		Menu
	Daily/Weekly		Pre Ch
	Display		Info
	Time Search		TV/R

**Originalfernbedienung    Ersatzfernbedienung**

	Timer Set		3D
	Index Search		Shift + TV/R
	Up		Up
	Left		Left
	Right		Right
	Down		Down
	P+		Ch +
	P-		Ch -
	C.Reset		Exit
	Quick Find		Text
	System		Smart
	Show View		Media
	Speed		Vol +
	Slow		Vol -
	Rec		Rec
	<<		<<
	Play		Play





**Originalfernbedienung Ersatzfernbedienung**

	>>		>>
	Pause		Pause
	Stop		Stop

**Originalfernbedienung Ersatzfernbedienung**