

 

 

 









 


 
 










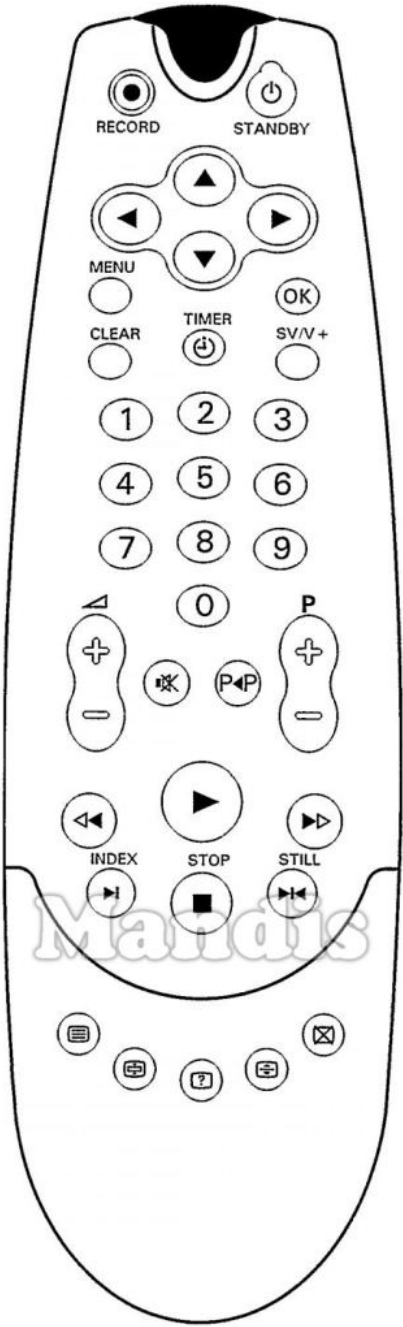

Originalfernbedienung Ersatzfernbedienung




 

 




	Standby		Power
	Record		Rec
	Up		Up
	Left		Left
	Right		Right
	Down		Down
	→>		Smart
	OK		Ok
	Menu		Menu
	Clear		Exit
	Timer		AV
	SV/V+		Media
	1		1
	2		2
	3		3
	4		4
	5		5

Originalfernbedienung Ersatzfernbedienung

	6		6
	7		7
	8		8
	9		9
	0		0
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	P<P		Pre Ch
	P+		Ch +
	P-		Ch -
	Play		Play
	<<		<<
	>>		>>
	> / Index		>>
	Stop		Stop
	> < Still		Pause





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Teletext		Text
	Hold		Red
	Reveal		Green
	Size		Yellow
	Cancel		Blue

