
 

 




 






 




 


 

 

 

 

 


 
 




 
 








Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	TV		Smart
	Text / Mix		Text
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Up / P +		Up
	Up / P +		Ch +
	Down / P -		Down

Originalfernbedienung Ersatzfernbedienung

	Down / P -		Ch -
	Right / Vol +		Right
	Right / Vol +		Vol +
	Left / Vol -		Left
	Left / Vol -		Vol -
	Red		Red
	Green / Picture		Green
	Yellow / Tuning		Yellow
	Blue / Features		Blue
	Expand		3D
	Reveal		Media
	Norm / Hold		Pause
	Recall / Index		Info
	Recall / Index		Pre Ch
	Subpage		Subt
	Update		Options
	I / II		Dual



