 

 

 

 

 













 



 











Originalfernbedienung Ersatzfernbedienung

	TV/SAT		AV / Input / RDS
	Standby		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	ESC TXT		Text / Goto
	0 +/-		0
	Help		D.Menu / Top
	Up		Up
	Left / Vol-		Left
	Left / Vol-		Vol-

Originalfernbedienung Ersatzfernbedienung

	OK		OK
	Menu		Menu / Home
	Right / Vol+		Right
	Right / Vol+		Vol+
	Down		Down
	CH/Page-		CH- / Page-
	CH/Page+		CH+ / Page+
	List		Smart / List
	i		Info / Angle
	P.Guide		Guide / EPG / -/--
	FAV		Fav / Marker / PC
	Mute		Mute / Dimmer
	Audio		Audio / Lang I/II
	Radio		TV/Radio /
	Zoom		Zoom / Size
	Red / Add / East		Red / Netflix / Search
	Green / Lang / Locsat		Shift + Audio / Lang I/II





Originalfernbedienung

Ersatzfernbedienung

	Green / Lang / Locsat		Green / APP / Repeat
	Yellow/Delete A/Focus		Yellow / YouTube / Repeat
	Blue/West		Blue / Prime Video / Random

Originalfernbedienung

Ersatzfernbedienung