



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Rec		Rec / Rec Mode
	<<		<< / Tune-
	>>		>> / Tune+
	Lang		Audio / Lang I/II
	Source (Games)		Eject / Surround
	Movie-Music-Phot		Picture / Format
	[≡]..		Zoom / Size
	* / O		Sleep / Timer
	TV		TV/Radio /
	Q.Menu		D.Menu / Top
	[-O-]		Setup / OPT /
	[≡]/Text		Text / Goto

Originalfernbedienung Ersatzfernbedienung

	Menu		Menu / Home
	Up		Up
	i		Info / Angle
	Left		Left
	OK		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	Back		Back / Return
	Vol+		Vol+
	World (Violet)		Smart / List
	PR+		CH+ / Page+
	Vol-		Vol-
	* / Q		Display / Media
	PR-		CH- / Page-
	1		1
	2		2





Originalfernbedienung

Ersatzfernbedienung

3 def	3	CO - STB <b>3</b>	3
4 ghi	4	VIDEO <b>4</b>	4
5 jkl	5	TAPE <b>5</b>	5
6 mno	6	TUNER <b>6</b>	6
7 pqrs	7	AUX - HDD <b>7</b>	7
8 tuv	8	USB <b>8</b>	8
9 wxyz	9	BLUETOOTH <b>9</b>	9
Guide	Guide	GUIDE EPG	Guide / EPG / -/--
0	0	HDMI - BAT <b>0</b>	0
Red	Red	NETFLIX SEARCH	Red / Netflix / Search
Green	Green	APP REPEAT	Green / APP / Repeat
Yellow	Yellow	YouTube REPEAT A-B	Yellow / YouTube / Repeat
Blue	Blue	Prime Video RANDOM	Blue / Prime Video / Random
Recall	Recall	SHIFT + RETURN BACK	Shift + Back / Return

Originalfernbedienung

Ersatzfernbedienung


