 
 




Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Open / Close		Eject / Surround
	Play Mode		Picture / Format
	Timer		Sleep / Timer
	Repeat		Green / APP / Repeat
	A-B		Yellow / YouTube / Repeat
	Title		Sound / Title
	Display		Display / Media
	Zoom		Zoom / Size
	Menu		Menu / Home
	Setup		Setup / OPT /
	Return		Back / Return
	Watch TV		Smart / List
	Up		Up
	Left		Left
	Select		OK
	Right		Right







 

 

 

 





 



 



Originalfernbedienung Ersatzfernbedienung

	Down		Down
	Play / Pause		Play / Slow
	Play / Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	I<< Skip		I<< / Preset-
	Skip >>I		>>I / Preset+
	<< Search		<< / Tune-
	Search >>		>> / Tune+
	Program+		CH+ / Page+
	Rec. Mode		Shift + Rec / Rec Mode
	TV / DVD		TV/Radio /
	Program-		CH- / Page-
	Record		Rec / Rec Mode
	Insert Chapter		D.Menu / Top
	Subtitle		Subtitle / EQ
	Video Source		AV / Input / RDS
	Audio		Audio / Lang I/II





Originalfernbedienung Ersatzfernbedienung

	Angle		Info / Angle
	Search Mode		Red / Netflix / Search
	1		1
	2		2
	3		3
	Clear		Exit / Cancel / Clear
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

Originalfernbedienung Ersatzfernbedienung

