









 



 





 














Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close		Eject / Surround
	Title		Sound / Title
	Display		Display / Media
	Menu		Menu / Home
	Zoom		Zoom / Size
	Return		Back / Return
	Up		Up
	Right		Right
	Left		Left
	Select		OK
	Down		Down
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	I<<		I<< / Preset-
	>>I		>>I / Preset+

Originalfernbedienung Ersatzfernbedienung

	<<		<< / Tune-
	>>		>> / Tune+
	Subtitle		Subtitle / EQ
	Audio		Audio / Lang I/II
	Angle		Info / Angle
	Search Mode		Red / Netflix / Search
	Program		TV/Radio /
	Repeat		Green / APP / Repeat
	A-B		Shift + Yellow / YouTube /
	Time		Sleep / Timer
	1		1
	2		2
	3		3
	C		Yellow / YouTube / Repeat
	4		4
	5		5
	6		6



