





 


 

 

 










 

 










Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Last		Pre Ch
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TV/R		TV/R
	Audio		Dual
	Info		Info
	Mode		D. Menu

Originalfernbedienung Ersatzfernbedienung

	Favor		Options
	Menu		Menu
	Sub-T		Subt
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	CH+		Ch +
	CH-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue





Originalfernbedienung Ersatzfernbedienung





 
 

 






 
 

EPG	EPG	GUIDE	Guide
TEXT	Text	REPEAT TEXT	Text

Originalfernbedienung Ersatzfernbedienung



 





Originalfernbedienung Ersatzfernbedienung

Power		Power
Last		Pre Ch
Mute		Mute
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
0		0
TV/R		TV/R
Audio		Dual
Info		Info
Mode		D. Menu

Originalfernbedienung Ersatzfernbedienung

Favor		Options
Menu		Menu
Sub-T		Subt
Exit		Exit
Up		Up
Down		Down
Right		Right
Left		Left
OK		Ok
CH+		Ch +
CH-		Ch -
Vol+		Vol +
Vol-		Vol -
Red		Red
Green		Green
Yellow		Yellow
Blue		Blue





Originalfernbedienung Ersatzfernbedienung

EPG	GUIDE	Guide
Text	REPEAT TEXT	Text

Originalfernbedienung Ersatzfernbedienung





Originalfernbedienung Ersatzfernbedienung

Power		Power
Last		Pre Ch
Mute		Mute
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
0		0
TV/R		TV/R
Audio		Dual
Info		Info
Mode		D. Menu

Originalfernbedienung Ersatzfernbedienung

Favor		Options
Menu		Menu
Sub-T		Subt
Exit		Exit
Up		Up
Down		Down
Right		Right
Left		Left
OK		Ok
CH+		Ch +
CH-		Ch -
Vol+		Vol +
Vol-		Vol -
Red		Red
Green		Green
Yellow		Yellow
Blue		Blue





Originalfernbedienung

Ersatzfernbedienung

EPG		Guide
Text		Text

Originalfernbedienung

Ersatzfernbedienung



Mandis

Mandis SHOP
www.mandis.tv