 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Red		Red / Netflix / Search
	Green / Aspect		Green / APP / Repeat
	Green / Aspect		Picture / Format
	Yellow		Yellow / YouTube / Repeat
	Blue / SUBT		Subtitle / EQ
	Blue / SUBT		Blue / Prime Video / Random
	<<		<< / Tune-
	>>		>> / Tune+
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	USB		Shift + 8
	Play / Pause		Play / Slow
	Play / Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Rec		Rec / Rec Mode





 



 



 

 







 

 

 



 
 
Originalfernbedienung Ersatzfernbedienung

	F1 / Find		D.Menu / Top
	F2 / Zoom		Zoom / Size
	F2 / Zoom		Setup / OPT /
	F3 / TXT		Smart / List
	F3 / TXT		Text / Goto
	F4		Display / Media
	Menu		Menu / Home
	Up / CH+		Up
	Info		Info / Angle
	Left / Vol-		Left
	OK		OK
	Right / Vol+		Right
	FAV		Fav / Marker / PC
	Down / CH-		Down
	Exit		Exit / Cancel / Clear
	Vol+		Vol+
	EPG		Guide / EPG / -/-





Originalfernbedienung Ersatzfernbedienung









	Pag+		CH+ / Page+
	Vol-		Vol-
	Audio		Audio / Lang I/II
	Pag-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Recall		Back / Return
	0		0
	TV / Radio		TV/Radio /

Originalfernbedienung Ersatzfernbedienung





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Red		Red / Netflix / Search
	Green / Aspect		Picture / Format
	Green / Aspect		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue / SUBT		Subtitle / EQ
	Blue / SUBT		Blue / Prime Video / Random
	<<		<< / Tune-
	>>		>> / Tune+
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	USB		Shift + 8
	Play / Pause		Play / Slow
	Play / Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Rec		Rec / Rec Mode





 









 

 

 

 

 

 

 




 
Originalfernbedienung Ersatzfernbedienung

	F1 / Find		D.Menu / Top
	F2 / Zoom		Setup / OPT /
	F2 / Zoom		Zoom / Size
	F3 / TXT		Text / Goto
	F3 / TXT		Smart / List
	F4		Display / Media
	Menu		Menu / Home
	Up / CH+		Up
	Info		Info / Angle
	Left / Vol-		Left
	OK		OK
	Right / Vol+		Right
	FAV		Fav / Marker / PC
	Down / CH-		Down
	Exit		Exit / Cancel / Clear
	Vol+		Vol+
	EPG		Guide / EPG / -/-





Originalfernbedienung Ersatzfernbedienung

	Pag+		CH+ / Page+
	Vol-		Vol-
	Audio		Audio / Lang I/II
	Pag-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Recall		Back / Return
	0		0
	TV / Radio		TV/Radio /

Originalfernbedienung Ersatzfernbedienung

