


 

 
 









 



 



 



 


 




















Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Open/Close		Eject / Surround
	Audio		Audio / Lang I/II
	1		1
	2		2
	3		3
	Angle		Info / Angle
	4		4
	5		5
	6		6
	Subtitle		Subtitle / EQ
	7		7
	8		8
	9		9
	Search		Red / Netflix / Search
	PRG		TV/Radio /
	CLR		Exit / Cancel / Clear

Originalfernbedienung Ersatzfernbedienung

	0		0
	Title		Sound / Title
	Up		Up
	Menu		Menu / Home
	Left		Left
	OK		OK
	Right		Right
	Display		Display / Media
	Down		Down
	Video Out		AV / Input / RDS
	Return		Back / Return
	Setup		Setup / OPT /
	Mode		D.Menu / Top
	Vol+		Vol+
	Mute		Mute / Dimmer
	Mark		Fav / Marker / PC
	Zoom		Zoom / Size





Originalfernbedienung Ersatzfernbedienung

	Vol-		Vol-
	A-B		Yellow / YouTube / Repeat
	SlowR		CH- / Page-
	SlowF		CH+ / Page+
	<<		<< / Tune-
	>>		>> / Tune+
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Stop		Stop / Hold
	Pause/Step		Pause / Step / Freeze
	Play		Play / Slow

Originalfernbedienung Ersatzfernbedienung

