










 















 
 




 









 

 





 



 

 
 

 

 

 
 
 




Originalfernbedienung Ersatzfernbedienung

| | | | |
|-------------------------------------------------------------------------------------|----------|-------------------------------------------------------------------------------------|-------|
|  | Power |  | Power |
|  | Mute |  | Mute |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | -/--/--- |  | Guide |
|  | Swap |  | Back |
|  | TV/AV |  | AV |
|  | Game |  | Smart |
|  | Text |  | Text |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---------------------------------------------------------------------------------------|---------------|---------------------------------------------------------------------------------------|--------------|
|  | Menu |  | Menu |
|  | P.Std |  | Format |
|  | S.Std |  | Dual |
|  | P+ |  | Ch + |
|  | P+ |  | Up |
|  | P- |  | Ch - |
|  | P- |  | Down |
|  | V+ |  | Vol + |
|  | V+ |  | Right |
|  | V- |  | Vol - |
|  | V- |  | Left |
|  | Red / Picture |  | Red |
|  | Green / Sound |  | Green |
|  | Green / Sound |  | Shift + Dual |
|  | Yellow / Time |  | Yellow |
|  | Blue / Setup |  | Blue |
|  | Blue / Setup |  | Options |





| Originalfernbedienung | Ersatzfernbedienung | Originalfernbedienung | Ersatzfernbedienung |
|-------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------|-----------------------|---------------------|
|  White / Index |  Info | | |
|  Reveal |  Play | | |
|  Zoom |  Eject | | |
|  East/West |  Pause | | |
|  Mix |  D. Menu | | |
|  Lock |  3D | | |
|  Cancel |  Exit | | |
|  Hold |  Stop | | |
|  Subcode |  Subt | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

