 





 

 

 






 




 
 




 
 




 
 



 




 




Originalfernbedienung Ersatzfernbedienung

	On / Off		Power
	Sleep		Sleep
	Volume +		Vol +
	Volume -		Vol -
	CD Play/Pause		Play
	CD Play/Pause		Pause
	CD Stop		Stop
	FM		Ch +
	AM		Ch -
	AUX		Media
	Track - / Tune -		Left
	Track - / Tune -		I<<<
	Track - / Tune -		<<<
	Track + / Tune +		Right
	Track + / Tune +		>>>
	Track + / Tune +		>>I
	Mute		Mute

Originalfernbedienung Ersatzfernbedienung

	1		1
	2		2
	3		3
	4		4
	5		5
	6		6

