



Originalfernbedienung Ersatzfernbedienung

	POWER		Power
	SOURCE		Source
	ASPECT		Eco / Aspect
	FREEZE		Freeze / Timer
	BLANK		Blank / Mute
	MUTE	+	Shift + Blank / Mute
	VOL+		Vol + / Page +
	MENU		Menu
	AUTO		Auto
	VOL-		Vol - / Page -
	PIP SIZE	+	Shift + Left
	PIP SOURCE	+	Shift + Up
	D.ZOOM+		+ / Play
	PIP POS	+	Shift + Right
	RETURN		Volt / Focus
	D.ZOOM-		- / Stop
	KEystone		Down

Originalfernbedienung Ersatzfernbedienung

	KEYSTONE UP		Up
	EXIT		Mode



DOWN